

	1 8pcs Ø4x16mm	2 4pcs Ø4x19mm	3 25pcs Ø3.5x14mm	4 16pcs Ø3.5x16mm	5 12pcs Ø3.5x35mm	6 4pcs 1-1/4"	7 6mm
	Flat head screw	Round head screw	Color galvanized screw with flat head	Color galvanized screw with flat head	Black screw with flat head	Hinge	Shelf clips
Hardware list		<b>&lt;=======</b> [}					
				11 4pcs 40mmx40mm	10 16pcs Ø7	9 5set	8 3set S30B533H10GA08
Assembly tools required	Screw	Rubber	J Door (4) I Drawer box(3) H Adjustable shelf(3)	Bracket rainbow 90°	Bumper	L-shape bracket	Drawer slide
Cabinet Part List	A Front frame	B Side panels(2	) C Bottom panel	(1) D Top panel(	1) E Fixed she	lf(4) F Back pane	el G Toe kick


Step 1: With front frame (A) of cabinet lay down on clean and soft surface then put glue into groove.

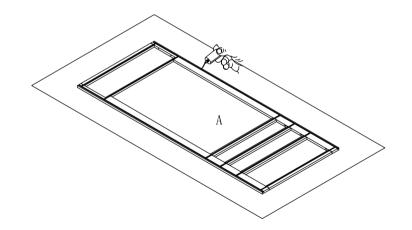


Step 2: Install side panels. Insert side panel into groove of front frame (A) until side panel and front frame even.

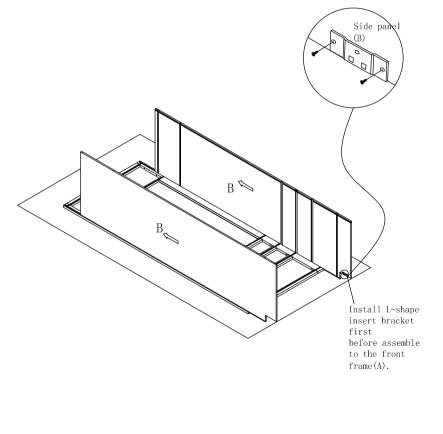


Step 3: Install top&bottom panel and fixed shelf. Insert top panel(D) bottom panel(C) and fixed shelf (E) into groove of front frame (A).

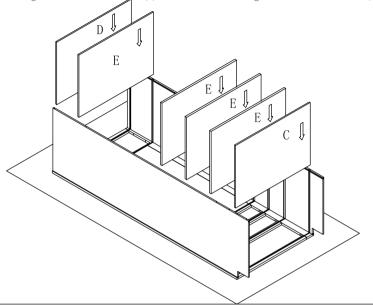


Step 4: Install back panel(F).until bottom panel and top panel and fixed shelf into the groove of back panel.

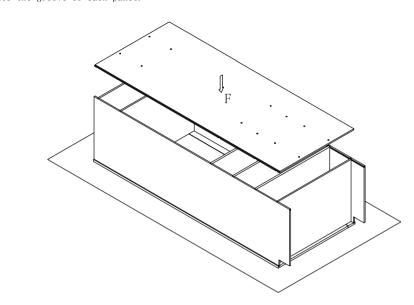


Step 5: Install assembly screws (5)  $\emptyset$ 3.5x35mm into back panel (D) then fit in the L-shape insert bracket from front frame (A) into bottom panel (C) bracket and screw the bracket with (3)  $\emptyset$ 3.5x14mm screw

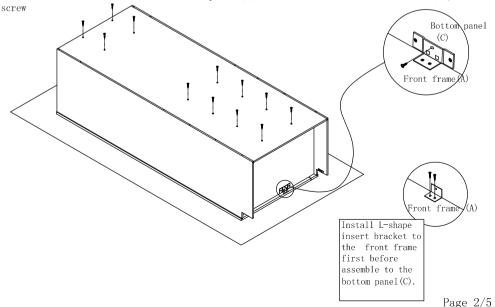


Step 6: Install toe kick panel(G). Fit in the L-shape insert bracket from toe kick panel (G) into side panel (B) bracket and screw the bracket with(3) \( \mathbf{03.5} x 14 mm \) screw.

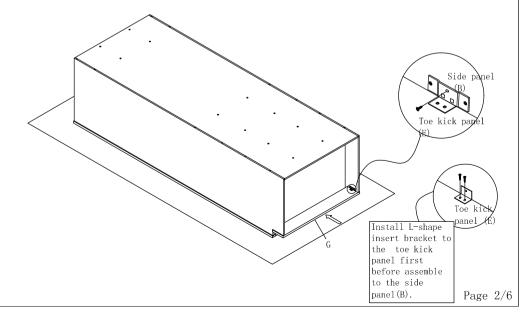


Step 7: Install back panel. Fit in the L-shape insert bracket from back panel (D) into side panel (B) bracket and screw the bracket with (3) Ø3.5x14mm screw.

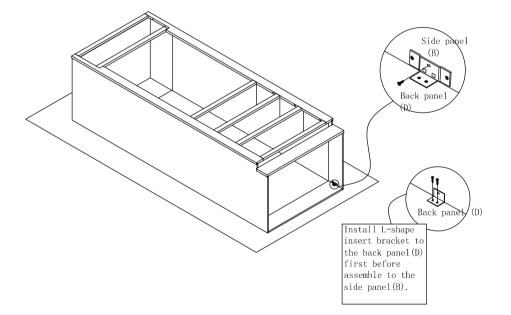



Step 8: Install door panel(J) and corner block screw the hing to the door and face frame, then install rainbow bracket to the side panel (B), front frame (A) and back panel (D) with the (4)  $\emptyset$ 3.5x16mm screw.

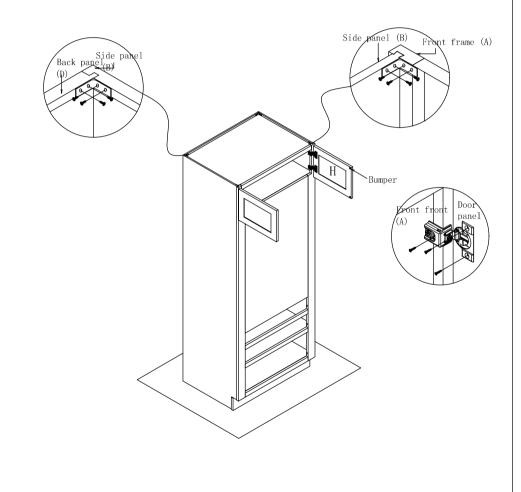

Step 9: Install the drawer slide rear brackets. Screw the drawer slide rear bracket to the back panel.




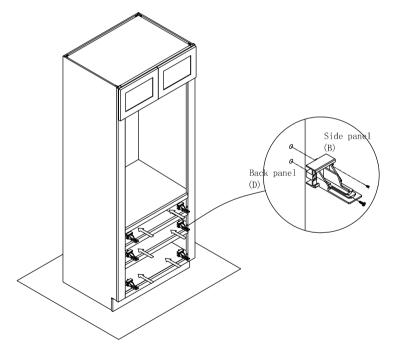


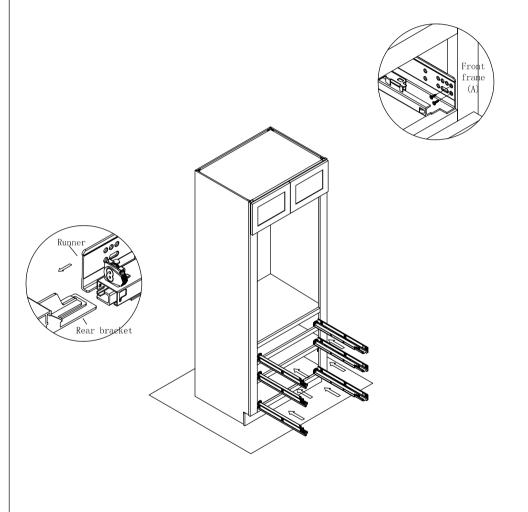

Step 11: Put the drawer box on the drawer slide and push the drawer box to make it the end of the runner is locked to the hole of the drawer back panel. Complete the installion of the drawer box when you hear the sound "click" which means the locking device is locked on the drawer slide.

Step 12: Finish installion of the cabinet.

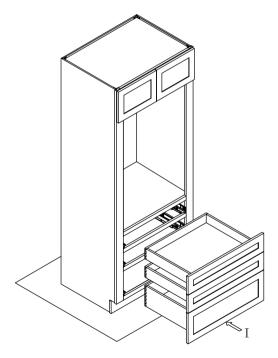

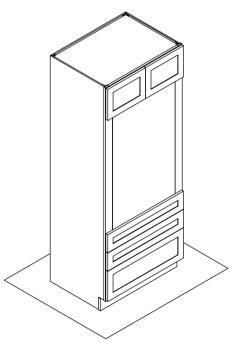

#### Assembly Instruction For Drawer Box (I+om:0C338424 0C339024 0C339624)

		(Item		9024 OC339624)						
	1 lopes Ø3.5x16mm Color galvanized screw with flat head	2 6pcs Ø3.5x35mm  Black screw with flat head	3 4pcs Ø4x25mm screw with flat head	4 4pcs 40mmx40mm Bracket rainbow 90°	5 Iset S30B457H10GA08 Drawer slide		Drawer Par	t List		
			_			a	Drawer Front(1)	d	Side Panel(2)	
Hardware list				0000		b	Front Panel(1)	е	Bottom Panel(1)	
						С	Back Panel (1)			
Assembly tools required	Screw	Rubber								
Cabinet Part List	A Front frame	B Side panels(2)	C Back panel(	D Drawer Pa	rts					
Drawer Box Parts  Step 1: Screw the drawer front panel to the drawer front(a).						Step 2: Install drawer front panel(b) into drawer side panel(d).				
groove of drawer	the drawer bottom panel(e) side panel, and inatall the the drawer side panel.		all the drawer back pane anel(d).	l(c) to the	Step 5 : F	Finish ins	stallion of the de	rawer box		